

TRADITIONAL WOOD BURNING STOVE



www.boutiquecamping.com



CONGRATULATIONS & ON YOUR NEW PURCHASE!

Whether you're hosting in your tent, in your garden or at an event, we're all about designing pioneering products that effortlessly enhance your outdoor experiences and adventures.

COMPONENTS

_	4
	TRADITIONAL WOOD BURNING STOVE
-	X6 FLVE SEGMENTS (INCLVDING SPARK ARRESTOR)
25	ASHTRAY
	GLASS WINDOW
	TOOL KIT
2	

And the second second



SETTING UP YOUR STOVE

-	_
11	
	1

Unwrap the glass window and locate the (X6) bolts, nuts, and rectangular washers provided. Position the glass onto the rear of the door and 1) insert bolts front to back, 2) thread through a washer and 3) lock in to place by screwing on a nut.



In some cases only, you may need to attach the handle on to the lower vent. If so, simply screw it clockwise until tight.



Layer the bolt with the steel handle (positioned as pictured) and then the rounded washer. Thread the sandwiched handle through the door hole and lock it into place using the nut provided.



You will have x1 'double flanged' flue segment, please place this in the first position on top of the stovetop. This will prevent any soot residue from leaking and instead direct it back into the fire box.



NOSTALGIC VIBES and TOASTY NIGHTS FROM THE COMFORT OF YOUR TENT

If your tent is from our Polycotton or Cotton canvas range, you can safely install your stove to amplify your homeaway-from-home interior and keep it toasty! Fire retardant tents are available and recommended.



*A carbon monoxide alarm inside the tent is recommended.



TOP TIPS:

When in use, avoid touching the stove and flue without gloves on.

Open the firebox door to create air flow, allowing the fire to breathe.

Always work in well ventilated spaces with a constant supply of fresh air.

 \heartsuit

Do not leave anything combustible near the stove. If installed in a tent, we recommend that sides and top are at least 60cm away from the fabric.

Ø

We recommend using a carbon monoxide alarm when in use, especially in a tent. Protect your groundsheet /grass/flooring with a flame retardant heat map (just in case hot embers escape).

For extra stability on windy days, we recommend attaching two ropes to the holes in the chimney flue and pegging firmly into the ground.

✓ To slow the fire, close the valves located across the ashtray and at the top of the stove above the glass window. Opening these will increase airflow and boost the fire, keeping it lit for longer.





LET'S CONNECT!



We'd love to see where your adventure takes you!

Whether it's a reel, a pitching time lapse, or a stunning setup pic, let us and the world see! Don't forget to give us a follow and TAG us, your creation could be featured on our socials and website!

** THANK YOU! *

We would like to personally thank you again for your recent purchase and ongoing support.

If you haven't already, don't forget to sign up to our newsletter for exclusive VIP offers and new product launches!

Ollie, Fiaz & team BC x







SOMETHING NOT QUITE RIGHT?

We hope that you will absolutely LOVE your new Wood Burning Stove, but if you aren't 100% happy, our customer care team is here to assist and find a solution for you!

Please note, Boutique Camping accepts no responsibility for the use or misuse of our stoves. We only recommend using stoves inside fire-retardant or breathable fabric tents that are ventilated and have the correct flue (chimney) installation.

We advise that your stove is never left unattended, especially around children or pets. It is important that when in use, the stove is propped on a heat and fireproof mat.



WE'VE MOVED OVR RETURNS FORM ONLINE!

If you wish to return or exchange your purchase you must notify us within 14 days of receiving your product by scanning the code below and filling out our online returns request form.





www.boutiquecamping.com www.belltent.com www.boutiquecamping.au.com